




United Pacific

TRAIN HORN

Item number: 46151

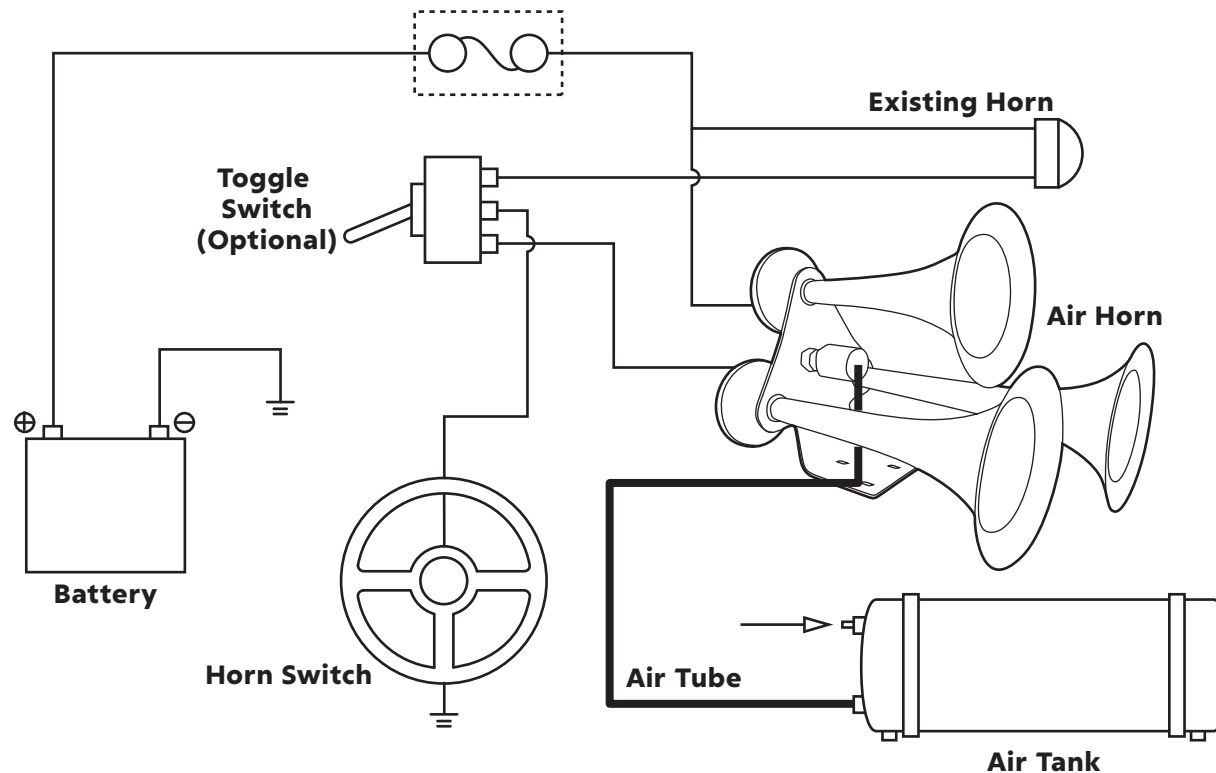

Mounting Instructions:

1. Place horn at desired location
2. Mark mounting holes
3. Drill mounting holes with $\frac{5}{16}$ " drill
4. Attach horns with $\frac{1}{4}$ " bolts
5. Electrical solenoid installation
 - a. Connect air line from secondary air tank to the solenoid
 - b. Wire solenoid to the switch in the cab
6. Manual valve installation
 - a. Connect air line from secondary air tank to the manual valve
 - b. Run air line from manual valve to horn inlet port (remove solenoid)
7. Teflon Tape all fittings to prevent leakage

Warning: These horns consume a large volume of air. If used on a truck installation, be sure to tap into an auxiliary air supply. Check with truck manufacturer for proper location. UPI will not warranty damages or discolorations caused by road hazards, accidents, misuse, or corrosive chemicals, including, acid washes and highway snow/ice solvents. Corrosive chemicals will cause discoloration. UPI will only warranty horns mounted horizontally behind the CAB/SLEEPER on the frame deck. UPI will NOT warranty horns mounted upside down or underneath of the truck. Mounting horns upside down or underneath the truck will subject the horns to road hazards & debris.

This product is intended solely for the purpose of Off-road use. Check federal laws and/or regulations in your state, county, and/or municipality regarding installation and use of this product.


042919 V2



United Pacific

CLAXON DE TREN

Numero de Parte: 46151

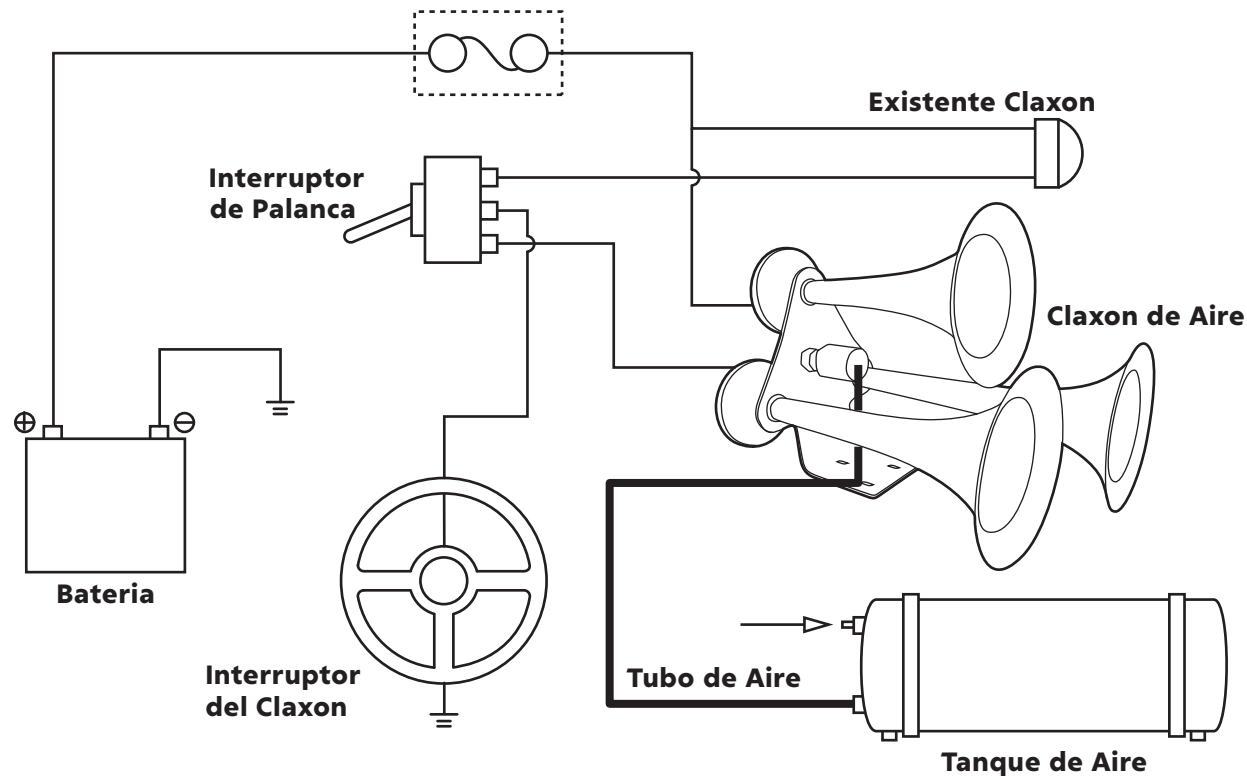

Instrucciones para Montar:

1. Coloque el claxon en el lugar deseado
2. Marca los huecos para montar
3. Taladrar los huecos con un taladro de $\frac{5}{16}$ "
4. Conectar el claxon con un perno de $\frac{1}{4}$ "
5. Instalación para solenoide eléctrica
 - a. Conectar línea de aire desde un tanque de aire secundario para solenoide
 - b. Alambrar el solenoide a una llave en la cabina
6. Instalación para válvula manual
 - a. Conectar cable de aire desde un tanque de aire secundario para la válvula manual
 - b. Correr línea de aire desde la válvula manual hasta el puerto de entrada del claxon (quitar solenoide)
7. Usar cinta teflon para prevenir goteo

Aviso: Estas Cornetas consumen un gran volumen de aire. Si lo instalan en camiones, asegurese de entrar por la línea que le dá el aire. Chequear con la fabrica para su lugar apropiado. UPI nó garantiza daños o descoloraciones causados por los peligros en la carretera, accidentes, mal uso, o químico corrosivos que incluye baño acido y químico de nieve en las carreteras. Químico corrosivo causa descoloración. UPI solo dá garantia a el claxon montado detras de la cabina sentada horizontal en la plataforma. UPI nó garantizan el claxon montada alrevés o por debajo del camion. Cornetas montadas alrevés o por debajo del camion es sujeto de daños causado por los peligros en la carretera.

El uso de este producto es solamente fuera de carretera. Consultelo con las autoridades locales para las regulaciones de su estado, condado y municipal antes de instalarlo.